

Suede

Prompt cleaning is always recommended. For best results follow cleaning steps precisely.

Ordinary dirt and stains can be removed with a mild soap and water. Leave the cleaned area to air dry, or dry quickly with the warm setting of a hair dryer.

REGULAR CLEANING AND MAINTENANCE

Clean the soiled area with mild soap and water, then rinse with fresh water and dab with a lint free cloth until semi-dry. DO NOT rub the cleaned area!

EXAMPLE

Dirt
Dust
Grime

NOTE: Do not use any concentrated household, ammonia/chlorine or bleach based cleaners.

The information in this cleaning guide refers to performance in specific tests conducted under laboratory conditions. This information is not a guarantee and does not relieve the user from the responsibility of the proper and safe use of the product and referenced cleaning agents.